



---

## Polling Station sign with stable base and wheels

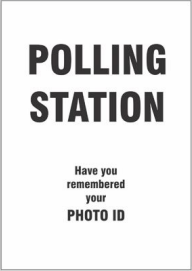
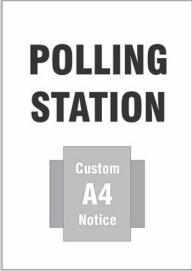

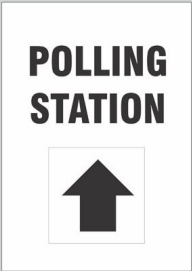
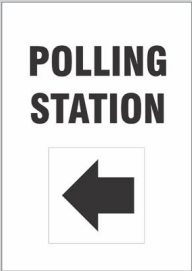
### Short Description

---

- Election site direction sign including large A1 posters
- Double-sided display with repositionable direction arrows
- Mobile, quick to set up and can be reused later with different posters

## Product Images



 <p>Waterproof posters (included)</p>	<p>Pair of outdoor posters are included PLUS 2 repositionable 'arrows' to signpost your Polling Station</p> <p>Optionally... your own A4 Notice can be added behind the clear poster cover sheet.</p>	 <p>With your custom A4 notice</p>
<p>With added arrows (included)</p>		
		

## Description

### Election site direction sign holder - wind-resistant

These wind-resistant water-base sign holders are perfect for your election site direction signs at Polling Stations up and down the country! The heavy water base ensures additional stability - ideal for exposed and windy locations or high foot traffic areas. Ensure your polling station has high-impact visible signs to direct voters to and around your buildings.

- Large water-fill base for excellent stability in windy and exposed locations
- Features wheels for easy placement in and outdoors
- Double-sided large A1 poster display for maximum information display
- Supplied with Polling Station posters and two loose arrows with sticky dots to indicate directions
- Easy use snap open-and-closed frames
- Clear poster protectors included so the sign can be reused with different posters for future events

## Additional Information

### Assembly and Installation



1. Remove Bolts from Springs.



2. Screw springs onto base of frame.



3. Place springs into locating holes on top of base.



4. Insert bolt with washer into base underside screw into springs and tighten.

You will find the box contains two spring assemblies together with the double-sided poster frame and the base. The base should be filled with water after assembly and before use outdoors. Unscrew the metal wing bolt with metal washer from the spring assemblies. Both black spring units, complete with their black plastic threaded fittings at **each** end of the spring, should be screwed into the bottom of the frame. The frame with springs attached should then be located into the grey plastic base. From beneath the base the wing bolts should be passed through the metal washers and inserted up through the base. Once engaged in the thread inside the springs the wing bolts should be fully tightened by hand.

Please order this product in good time for the election. Deliveries will need to be signed for; our delivery partners will not leave goods unattended and unsigned. Please leave a mobile phone number at checkout; this enables our delivery partners to notify you when your packages are on the way. Please ensure you have someone who can take the packages in, check them for any signs of damage, and provide a signature for the delivery.

### Delivery and Returns

#### The last order dates for guaranteed delivery:

- The UK mainland is on Monday, 1st July, before 2 pm for guaranteed delivery.
- Highland and Islands Thursday 27th June. As you know, it takes longer for the delivery companies to get to you.

Include in Google Feed	Yes
Postable	No
Small parcel	No
Oversize	No

# Product Options

---

Version:

1

